



**Cigar lighter (power outlet) fuses in the Peugeot 107 are the fuses #11 and #15 in the Instrument panel fuse box.**

## Table of Contents

Fuse box location

Instrument panel

Engine compartment

Fuse box diagrams

2005

2006

2007, 2008, 2009, 2010

2012

## Fuse box location



The fuse boxes are located under the instrument panel trim and next to the battery in the engine compartment.

## Instrument panel

*These are located on each side of the instrument panel under the trim.*




*If necessary, unlock the steering using the key.  
Turn the steering wheel to the left, remove bolt B.*



*Turn the steering wheel to the right, remove bolt C.*




*For the rev counter, partially unscrew bolt D located behind it.*

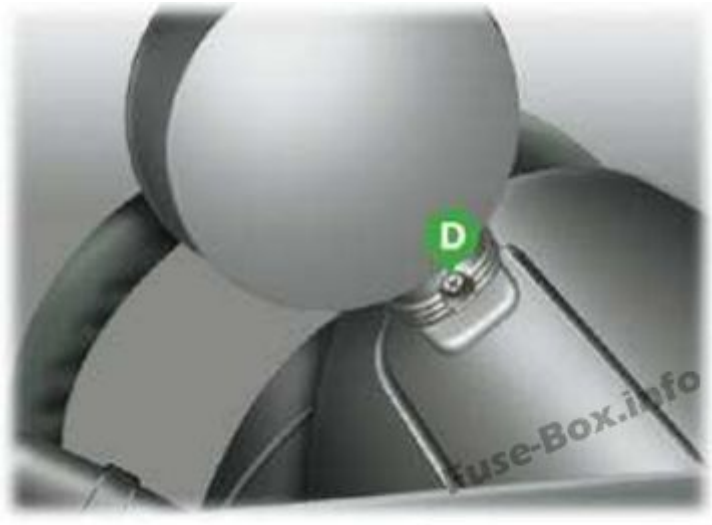

*Raise the instrument panel trim, and the rev counter trim if necessary, to gain access to the fuses located on the left and on the right.*



## Engine compartment

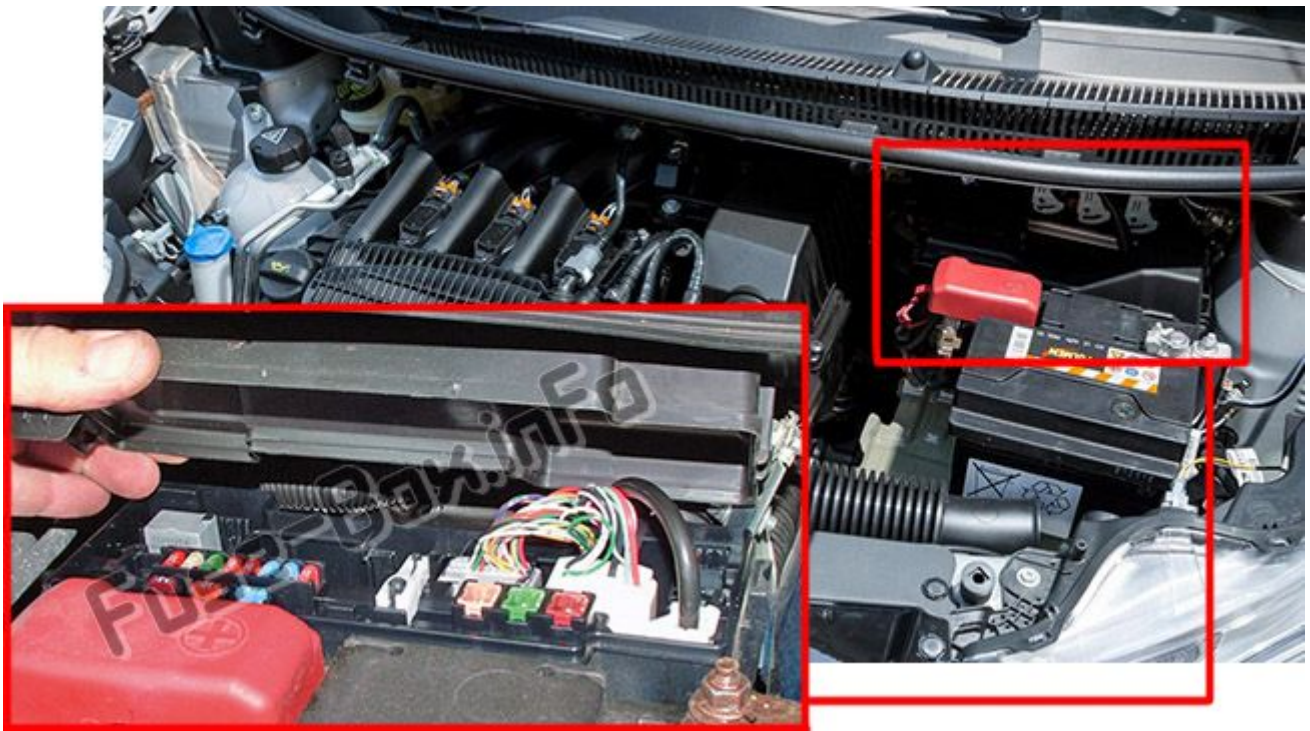

*Unclip the cover, pressing on the right on lug E, to gain access to the fuses.*

## Fuse box diagrams

2005

## Instrument panel

Advertisements

**Assignment of the fuses in the Instrument panel (2005)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1	10 A	Brake lights
2	25 A	Central locking/unlocking
3	20 A	Demisting
4	7.5 A	Rear lights
5	7.5 A	Diagnostic socket
6	7.5 A	Rear fog lamp - Instrument panel
7	7.5 A	Demisting
8	7.5 A	Injection control unit
9	10 A	Fuel gauge electrical supply
10	20 A	Wipers
11	15 A	Accessories - 12 volt socket
12	7.5 A	Demisting - ABS - Fan assembly relay - Front and rear wipers

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
13	15 A	Air bag control unit - Engine control unit - Engine immobiliser control unit - Ignition coil
14	7.5 A	Air conditioning
15*	40 A	Accessories - Demisting - ABS - Fan assembly relay - Front and rear wipers
16*	30 A	Electric windows
17*	40 A	Heating
		<i>* Fuses located behind the instrument panel. To change them, contact a PEUGEOT dealer</i>

Advertisements

## Engine compartment

### Assignment of the fuses in the engine compartment (2005)

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1	50 A	2 Tronic gearbox - Fan assembly (diesel)
2	10 A	Headlamps
2	30 A	Headlamps with daytime lights
3	25 A	ABS control unit

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
4	30 A	Ignition switch supply
5	10 A	Hazard warning lights
6	10 A	Headlamps
7	15 A	Courtesy light
8	15 A/25 A	Petrol/diesel engine control unit
9	10 A	Horn
10	30 A	Fan assembly (petrol)
11	40 A	ABS

**2006**

Advertisements

Instrument panel

### **Assignment of the fuses in the Instrument panel (2006)**

N°	Rating	Functions
1	10 A	Brake lights - ABS - "2 Tronic" gearbox
2	25 A	Central locking/unlocking
3	20 A	Rear screen demisting
4	7.5 A	Rear lights - Number plate lights - Instrument panel - Display
5	7.5 A	Diagnostic socket
6	7.5 A	Rear fog lamp - Instrument panel - "2 Tronic" gearbox
7	7.5 A	ABS - Power steering
8	7.5 A	ABS - Power steering - Air conditioning - Fan assembly
9	10 A	Rear lights - Central locking/unlocking - Electric windows -Rear screen demisting - Speedometer - Air conditioning - Heating
10	20 A	Front and rear wipers
11	15 A	Audio equipment - Electronic engine immobiliser
12	7.5 A	Rear screen demisting - ABS - Fan assembly - Front and rear wipers - Power steering - Central locking/unlocking - Air conditioning -Electric windows - Speedometer
13	15 A	Air bag - Engine control unit - Electronic engine immobiliser - "2 Tronic" gearbox - Instrument panel
14	7.5 A	Air conditioning
15*	40 A	Accessories - Demisting - ABS - Fan assembly relay - Front and rear wipers
16*	30 A	Electric windows
17*	40 A	Heating
		<i>* Fuses located behind the instrument panel. To change them, contact a PEUGEOT dealer</i>



## Engine compartment

### Assignment of the fuses in the engine compartment (2006)

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1	50 A	"2 Tronic" gearbox - Fan assembly (diesel)
2	10 A	Headlamps (According to country)
2	20 A	Headlamps with daytime lights
3	25 A	ABS control unit
4	30 A	Ignition switch supply
5	10 A	Hazard warning lights - Instrument panel warning lights - Direction indicators
6	10 A	Headlamps (According to country)
7	15 A	Courtesy light - Speedometer - Audio equipment - Instrument panel
8	15 A/25 A	Petrol/diesel engine control unit
9	10 A	Horn
10	7.5 A	Fan assembly (petrol)
11	10 A	ABS

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
12	15 A	Power steering

**2007, 2008, 2009, 2010**

Instrument panel

Advertisements

**Assignment of the fuses in the Instrument panel (2007, 2008, 2009, 2010)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1	10 A	Brake lights - ABS - "2 Tronic" gearbox
2	25 A	Central locking/unlocking
3	20 A	Rear screen demisting
4	7.5 A	Rear lights - Number plate lights - Instrument panel - Display
5	7.5 A	Diagnostic socket
6	7.5 A	Rear fog lamp - Instrument panel - "2 Tronic" gearbox

N°	Rating	Functions
7	-	Not used
8	7.5 A	ABS - Power steering - Air conditioning - Fan assembly
9	10 A	Rear lights - Central locking/unlocking - Electric windows - Rear screen demisting - Speedometer - Air conditioning - Heating - Rev counter
10	20 A	Front and rear wipers
11	15 A	Audio equipment - Electronic engine immobiliser - 12 V socket (120 W max)
12	7.5 A	Rear screen demisting - ABS - Fan assembly - Front and rear wipers - Power steering - Central locking/unlocking - Air conditioning - Electric windows - Speedometer - Rev counter
13	15 A	Air bag - Engine control unit - Electronic engine immobiliser - "2 Tronic" gearbox - Instrument panel
14	7.5 A	Air conditioning
15*	40 A	Accessories - Demisting - ABS - Fan assembly relay - Front and rear wipers
16*	30 A	Electric windows
17*	40 A	Heating - Air conditioning
		<i>* Fuses located behind the instrument panel. To change them, contact a PEUGEOT dealer.</i>

Advertisements

## Engine compartment

**Assignment of the fuses in the Engine compartment (2007, 2008, 2009, 2010)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1	50 A	"2 Tronic" gearbox - Fan assembly (diesel)
2	10 A	Headlamps
2	20 A	Headlamps with daytime lights
3	30 A	ABS/ESP control unit
4	30 A	Ignition switch supply
5	10 A	Hazard warning lights - Instrument panel warning lights - Direction indicators
6	10 A	Headlamps
7	15 A	Courtesy light - Speedometer - Audio equipment - Instrument panel - Rev counter
8	15 A/25 A	Petrol/diesel engine control unit
9	10 A	Horn
10	30 A	Fan assembly (petrol)
11	50 A	ABS/ESP
12	50 A	Power steering

## 2012

Advertisements

### Instrument panel

#### Assignment of the fuses in the Instrument panel (2012)

N°	Rating (A)	Functions
1	10	Brake lamps - ABS - 2 Tronic gearbox
2	25	Central locking/unlocking - Remote control
3	20	Rear screen demisting
4	7.5	Rear lamps - Number plate lamps - Instrument panel - Screen - headlamp adjustment - LED daytime running lamps - Sidelamps
5	7.5	Diagnostic socket
6	7.5	2 Tronic gearbox - Rear foglamp - ESP - LED daytime running lamps - Instrument panel - Rev counter
7	-	Not used
8	7.5	ABS/ESP - Power steering - Fan assembly

N°	Rating (A)	Functions
9	10	Reversing lamps - Central locking/unlocking - Electric windows - Rear screen demisting - Speedometer - Air conditioning - Heating - Rev counter - Remote control
10	20	Front and rear wipers and screenwash
11	15	Audio equipment -12 V socket (120 W max)
12	7.5	Heated rear screen - ABS - Fan assembly - Front and rear wipers and screenwash - Power steering - Central locking/ unlocking - Air conditioning - Heating - Electric windows - Speedometer - Rev counter - Remote control - Reversing lamp
13	15	Airbag - Fuel injection system - 2 Tronic gearbox - Instrument panel - Rev counter - LED daytime running lamps
14	7.5	Air conditioning - Heating
15*	40	Audio system -12 V socket - Front and rear wipers - Power steering - ABS/ESP - Cooling fan assembly
16*	30	Electric windows
17*	40	Air conditioning - Heating
		* Fuses located behind the instrument panel. To change them, contact a PEUGEOT dealer or a qualified workshop

Advertisements

## Engine compartment

**Assignment of the fuses in the engine compartment (2012)**

<b>N°</b>	<b>Rating (A)</b>	<b>Functions</b>
1	5	LED daytime running lamps
2	20	Front foglamps
3	10	Left hand front lamp
4	10	Right hand front lamp
5	7.5	2 Tronic gearbox - Fuel injection system
6	7.5	2 Tronic gearbox - Fuel injection system
7	30	LED daytime running lamps - Front foglamps
8	25	ABS
8	30	ABS/ESP (with VSC)
9	30	Starter motor - Heated rear screen - ABS - Cooling fan assembly - Front and rear wipers and screenwash - Power steering - Central locking/unlocking - Air conditioning - Heating - Electric windows - Speedometer - Rev counter - Remote control - Reversing lamp - Airbag - Fuel injection system - 2 Tronic gearbox - Instrument panel - LED daytime running lamps
10	10	Hazard warning lamps - Instrument panel - Rev counter - Direction indicators

N°	Rating (A)	Functions
11	20	Left hand front lamp - Right hand front lamp
12	15	Courtesy lamp - Speedometer - Audio system- Instrument panel - Rev counter
13	15	Fuel injection system - Cooling fan assembly
14	10	Horn
15	7.5	Replacement fuse
16	10	Replacement fuse
17	15	Replacement fuse
18	50	2 Tronic gearbox
19	30/40	Cooling fan assembly
20	40	ABS
20	50	ABS/ESP (with VSC)
21	50	Power steering

**Learn more:**



• [How to check the fuses?](#)



- How to replace a blown fuse?
- Why do car fuses blow?
- Types of automotive fuses

Acura

Alfa Romeo

Audi

BMW

Buick

Cadillac

Chevrolet

Chrysler

Citroën

Dodge

Fiat

Ford

GMC

Honda

Hummer

Hyundai

Infiniti

Isuzu

Jeep

KIA

Land Rover

Lexus

Lincoln

Mazda

Mercedes-Benz

Mercury

[Mitsubishi](#)

[Nissan](#)

[Oldsmobile](#)

[Opel / Vauxhall](#)

[Peugeot](#)

[Pontiac](#)

[Porsche](#)

[Renault](#)

[Saab](#)

[Saturn](#)

[Scion](#)

[SEAT](#)

[Skoda](#)

[Smart](#)

[Subaru](#)

[Suzuki](#)

[Tesla](#)

[Toyota](#)

[Volkswagen](#)

[Volvo](#)

[Mahindra](#)

[About](#) [Contact](#) [Use of Cookies](#)

Fuse Box Diagrams © 2023

All marks are the property of their respective holders.

Disclaimer: all materials are provided for information only. For qualified repairs, contact an authorized service center.