



**Cigar lighter (power outlet) fuse in the Peugeot 607 is the fuse #10 (2003-2004) or F9 (2005-2009) in the Instrument panel fuse box.**

### **Table of Contents**

Fuse box location

Dashboard fuse box

Engine compartment

Fuse box diagrams

2003, 2004

2005, 2006

2007

2009

## **Fuse box location**



The fuse boxes are placed in the lower part of the fascia (driver's side), in the engine compartment (left-hand side) and in the left boot trim.

## Dashboard fuse box

*To access, open the cover of the storage compartment on the driver's side. Tilt the fusebox downwards.*

## Engine compartment



*To access the fuses located in the engine compartment, remove the cover and unclip the fusebox lid.*

## Fuse box diagrams

2003, 2004

Dashboard Fuse box

Advertisements

### Assignment of the fuses in the Dashboard Fuse box (2003, 2004)

<b>Nº</b>	<b>Rating</b>	<b>Functions</b>
R		Replacement fuses.
1	30A	Locking / deadlocking.
2	20A	Radio amplifier.

<b>No</b>	<b>Rating</b>	<b>Functions</b>
3	30A	Windscreen wash.
4	30A	Rear window switches on rear doors.
5	15A	Electronic immobiliser, monochrome screen or colour screen control unit, instrument panel, air conditioning control unit, audio system / telephone.
6	10A	Rear right brake light.
7	10 A	Switches, rear lighter illumination, front courtesy light, rear courtesy light, rear lighter, number plate lighting, headlamp height adjustment.
8	10 A	Diagnostic connector, headlamp height adjustment control unit, HF locking receiver, passenger compartment air temperature sensor, HF tyre under-inflation receiver.
9	20 A	Headlamp wash.
10	20 A	Glove box lighting, front lighter, front and rear courtesy light, electrochrome interior mirror, electric exterior mirrors.
11	5 A	Control unit for automatic lighting of headlamps, air bags control unit, safety relay for automatic lighting of headlamps.
12	30 A	Rear window switches on driver's pad, rear windows.
13	30 A	Windscreen wiper.
14	15 A	Not used.
15	15 A	Driver's door pad, passenger's door pad.
16	15 A	Rear lighter.
17	5 A	Heated exterior mirrors.
18	15 A	Rear left brake light, additional brake light.
19	10 A	Parking assistance control unit, navigation control unit.
20	15 A	Alarm siren, monochrome screen or colour screen control unit, HF receiver, audio system / telephone, monochrome or colour navigation

<b>No</b>	<b>Rating</b>	<b>Functions</b>
		control unit, diesel additive control unit.
21	15 A	Dignostic connector, caravan socket, trailer sidelights relay.
22	15 A	Diesel additive control unit, driver's seat memory control unit, driver's door pad, passenger's door pad.
23	30 A	Driver's window, passenger's window, sunroof safety auto-reverse, passenger window switch on driver's door pad and passenger's door pad.
24	10 A	Rear fog lamp.
25	40 A	PARC shunt.
26	40 A	Heated rear screen, radio aerial amplifier.

Advertisements

## Engine compartment

**Assignment of the fuses in the engine compartment (2003, 2004)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1*	70 A	Built-in systems interface ( heated rear screen -heated exterior mirrors - windscreen wiper -screenwash - headlamp wash).
2*	50 A	Fan.
3*	50/60 A	ESP pump motor / ABS hydraulic unit.
4*	40 A	Air conditioning blower.
5	20 A	Horn - Horn control relay.
6	20 A	Left front and rear heated seats.
7	20 A	Right front and rear heated seats.
8*	70 A	Built-in systems interface.

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
9*	30 A	Passenger electric seat.
10*	20 A	Automatic headlamp lighting control unit.
11*	70 A	Built-in systems interface.
12*	70 A	Ignition supply (+ve accessories / ignition controlled +ve).
13*	20 A	Automatic headlamp lighting control unit.
14	15 A	Double injection relay supply.
15*	-	Not used.
16*	-	Not used.
17*	30 A	ESP hydraulic unit.
18	30 A	Ignition supply (+ starter).
19	20 A	Variable suspension control unit.
20	10 A	Fan unit relay - Cruise control safety switch - Manual gearbox clutch switch - Manual gearbox reversing lights switch or automatic gearbox multi-function switch - Automatic headlamp lighting control unit - Vehicle speed sensor - Coolant level sensor - Water in diesel sensor - Power switch control unit relay.
21	5 A	Automatic gearbox control unit - Automatic gearbox multi-function switch.
22	25 A	ESP control unit.
23	15 A	Diesel heating.
24	5 A	Engine management control unit - Dual control control unit.
25	10 A	Fuel pump.
26	30 A	Driver's seat memory control unit.
27	25 A	Double injection relay supply.

N°	Rating	Functions
28	10 A	Throttle housing de-icing resistor, Intake pilot solenoid valve - Flow meter - Piston de-activator injectionpump - Oil heating.
29	30 A	Air pump, diesel additive control unit - Diesel additive injector.
30	-	Cannot be used.
31	5 A	Automatic gearbox shift lock.
32	10 A	ESP or ABS control unit.
33	15 A	Automatic gearbox control unit - Automatic gearbox multi-function switch (except reversing lights) - Automatic gearbox sequential control.
34	5 A	Oxygen sensors - Exhaust gas recirculation solenoid valve. Exhaust gas recirculation throttle solenoid valve -Turbo pressure regulation solenoid valve.
		<i>*Maxi fuses provide additional protection for electrical systems. All work must be carried out by your PEUGEOT dealer.</i>

2005, 2006

Advertisements

Dashboard Fuse box



**Assignment of the fuses in the Dashboard Fuse box (2005, 2006)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F1	15 A	Front wash-wipe pump and wash-wipe fluid level sensor.
F2	30 A	Locking and deadlocking earth.
F3	5 A	Air bags.
F4	10 A	Clutch switch, brake dual-function switch, diagnostic connector, ESP sensor, air bags and pre-tensioners unit, air conditioning BCP3 relay, electrochromatic mirror.
F5	30 A	Front electric windows and sunroof supply.
F6	30 A	Rear electric windows supply.
F7	5 A	Glove box switch, courtesy lights, map reading lights, courtesy mirrors.
F8	20 A	Multifunction display supply, steering wheel control, alarm siren, trailer fusebox supply.
F9	30 A	Front and rear lighters (100 W max.)..
F10	15 A	Additive reservoir control unit supply.

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F11	15 A	Automatic gearbox control unit automatic gearbox positions selection switch, ignition switch.
F12	15 A	Trailer fusebox supply, hands-free kit, seats relay, seat memory unit, rain and brightness sensor.
F13	5 A	Engine fusebox supply, headlamp adjustment supply.
F14	15 A	Parking assistance control unit supply, headlamp adjustment switch, instrument panel, air conditioning, air bags and pre-tensioners unit.
F15	30 A	Locking and deadlocking supply.
F17	40 A	Heated rear screen and heated mirrors.
F31	5 A	Right-hand brake light.
F32	5 A	Left-hand brake light.
F33	5 A	Third brake light.
F34	5 A	Audio/telephone supply.
F35	5 A	Tyre under-inflation detection control unit, CD changer.
F36	30 A	Passenger seat relay.
F37	30 A	Passenger and rear right heated seats.
F38	30 A	Driver's and rear left heated seats.
F39	30 A	Driver's seat relay.
F40	5 A	Diagnostics socket.

Advertisements

## Engine compartment

**Assignment of the fuses in the engine compartment (2005, 2006)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F1	20 A	Fan assembly relay control, additional fan assembly (2.7 litre V6 HDI 24V), engine control unit power relay.
F2	15 A	Horn.
F3	10 A	Front and rear wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Fuel pump and purge canister solenoid valve.
F6	10 A	Power steering, suspension control unit, automatic gearbox.
F7	10 A	Engine control unit, ESP control unit.
F8	15 A	Starter coil.
F9	10 A	Level sensor, passenger compartment heating (HDI), STOP switch.
F10	30 A	Engine management actuators (ignition coil, solenoid valves, oxygen sensors, control units, injectors).
F11	40 A	Air conditioning blower relay.
F12	30 A	Windscreen wipers relay.
F13	40 A	Built-in system interface supply (ignition positive).

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F14	30 A	Air pump (petrol).

2007

Advertisements

### Dashboard Fuse box

#### Assignment of the fuses in the Dashboard Fuse box (2007)

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F1	15 A	Front wash-wipe pump and wash-wipe fluid level sensor.
F2	30 A	Locking and deadlocking earth.
F3	5 A	Air bags.

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F4	10 A	Clutch switch, brake dual-function switch, diagnostic connector, ESP sensor, electrochromatic mirror.
F5	30 A	Front electric windows and sunroof supply.
F6	30 A	Rear electric windows supply.
F7	5 A	Glove box switch, courtesy lights, map reading lights, courtesy mirror.
F8	20 A	Multifunction display supply, steering wheel control, alarm siren, trailer fusebox supply, audio RD4, RT4 GPS audio/telephone, electric mirror and front and rear electric window controls.
F9	30 A	Front and rear lighters (100 W max.).
F10	15 A	Additive reservoir control unit supply.
F11	15 A	Automatic gearbox control unit, automatic gearbox positions selection switch, ignition switch.
F12	15 A	Trailer fusebox supply, hands-free kit, seats relay, seat memory unit, rain and brightness sensor.
F13	5 A	Engine fusebox supply.
F14	15 A	Parking assistance control unit supply, instrument panel, air conditioning, air bags and pre-tensioners unit
F15	30 A	Locking and deadlocking supply.
F17	40 A	Hi-Fi amplifier, heated mirrors.
F31	5A	Right-hand brake light.
F32	5 A	Left-hand brake light.
F33	5 A	Third brake light.
F34	-	Not used.
F35	5A	Tyre under-inflation detection control unit CD changer.

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F36	30 A	Passenger seat relay.
F37	30 A	Passenger and rear right heated seats.
F38	30 A	Driver's and rear left heated seats.
F39	30 A	Driver's seat relay.
F40	5 A	Diagnostics socket.

Advertisements

## Engine compartment

### Assignment of the fuses in the engine compartment (2007)

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F1	20 A	Engine management control unit
F2	15 A	Horn.
F3	10 A	Rear electric blind.
F4	20 A	Headlamp wash.
F5	15 A	Fuel pump (except 2 litre HDI16V and 2.2 litre HDI 16V), diesel heater (2

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
		litre HDI 16V), engine management actuators (2.2 litre HDI 16V).
F6	10 A	Power steering, suspension control unit, automatic gearbox, automatic headlamp adjustment unit.
F7	10 A	Engine air flow sensor (2.2 litre HDI 16V), ESP control unit.
F8	25 A	Starter coil.
F9	10 A	Coolant level sensor, passenger compartment heating (HDI), STOP switch.
F10	30 A	Engine management actuators (injectors, ignition coil, solenoid valves, oxygen sensors).
F11	40 A	Air conditioning blower relay.
F12	30 A	Wipers relay.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	30 A	Air pump.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (2.2 litre 16V and 2 litre HDI 16V), inlet air heating solenoid valve (2 litre HDI 16V), airflow sensor (2 litre HDI 16V), injection pump (2.2 litre HDI 16V), oxygen sensor, purge canister solenoid valve (3 litre V6 24V).
F20	10 A	Water in diesel sensor (2 litre HDI 16V and 2.2 litre HDI 16V), turbo regulation solenoid valve (2 litre HDI 16V), timing and exhaust solenoid valves (3 litre V6 24V).
F21	10 A	Fan assembly relay control.

2009

Advertisements

## Dashboard Fuse box

**Assignment of the fuses in the Dashboard Fuse box (2009)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F1	15 A	Front wash-wipe pump and wash-wipe fluid level sensor.
F2	30 A	Locking and deadlocking earth.
F3	5 A	Air bags.
F4	10 A	Clutch switch, brake dual-function switch, diagnostic connector, ESP sensor, electrochromatic mirror.
F5	30 A	Front electric windows and sunroof supply.



<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F6	30 A	Rear electric windows supply.
F7	5 A	Glove box switch, courtesy lights, map reading lights, courtesy mirrors.
F8	20 A	Multifunction display supply, steering wheel control, alarm siren, trailer fusebox supply, PC Com, electric mirror and front and rear electric window controls.
F9	30 A	Front and rear lighters (100 W max.).
F10	15 A	Additive reservoir control unit supply.
F11	15 A	Automatic gearbox control unit, automatic gearbox positions selection switch, ignition switch.
F12	15 A	Trailer fusebox supply, hands-free kit, seats relay, seat memory unit, rain and brightness sensor.
F13	5 A	Engine fusebox supply.
F14	15 A	Parking assistance control unit supply, instrument panel, air conditioning, air bags and pre-tensioners unit.
F15	30 A	Locking and deadlocking supply.
F17	40 A	Hi-Fi amplifier, heated mirrors.
F31	5 A	Right-hand brake light.
F32	5 A	Left-hand brake light.
F33	5 A	Third brake light.
F34	-	Not used.
F35	5 A	Tyre under-inflation detection control unit CD changer.
F36	30 A	Passenger seat relay.
F37	30 A	Passenger and rear right heated seats.
F38	30 A	Driver's and rear left heated seats.

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F39	30 A	Driver's seat relay.
F40	5 A	Diagnostics socket.

Advertisements

## Engine compartment

### Assignment of the fuses in the engine compartment (2009)

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
F1	20 A	Engine management control unit.
F2	15 A	Horn.
F3	10 A	Rear electric blind.
F4	20 A	Headlamp wash.
F5	15 A	Fuel pump (except 2 litre HDI 16V), diesel heater (2 litre HDI 16V), turbocharger and diesel pre-heat unit (2.7 litre HDI 24V).
F6	10 A	Power steering, suspension control unit, automatic gearbox, automatic headlamp adjustment unit.
F7	10 A	ESP control unit.

N°	Rating	Functions
F8	25 A	Starter coil.
F9	10 A	Coolant level sensor, passenger compartment heating (HDI), STOP switch.
F10	30 A	Engine management actuators (injectors, ignition coil, solenoid valves, oxygen sensors).
F11	40 A	Air conditioning blower relay.
F12	30 A	Wipers relay.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	30 A	Air pump.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (2 litre HDI 16V), inlet air heating solenoid valve (2 litre HDI 16V), airflow sensor (2 litre HDI 16V and 2.7 litre V6 HDI 24V), oxygen sensor.
F20	10 A	Water in diesel sensor (2 litre HDI 16V) injection pump (2.7 litre V6 HDI 24V), turbo regulation solenoid valve (2 litre HDI 16V).
F21	10 A	Fan assembly relay control, additional fan assembly (2.7 litre V6 HDI 24V).

**Learn more:**