



Cigar lighter (power outlet) fuse in the Peugeot 308 is the fuse F9 in the Instrument panel fuse box.

Table of Contents

Fuse box location

- Dashboard fuse box

- Engine compartment

Fuse box diagrams

- 2007

- 2008

- 2009

- 2010

- 2011

Fuse box location

Dashboard fuse box

Left-hand drive vehicles: the fuse box is located in the lower dashboard (left-hand side).



Turn the screw a quarter of a turn to the left, unclip the cover by pulling the top right, disengage and pull away the cover, remove carrier on the back of which is fitted the tweezers.

Right-hand drive vehicles: it is located in the lower left of the dashboard.

Open the glove box lid, push the opening guide to the left past the first notch, open the glove box lid fully, turn the screw a quarter of a turn to the left, unclip the fusebox cover by pulling the top right, disengage the fusebox cover completely and turn it over, extract the support, on the back of which are fixed the tweezers and the replacement fuses.

Engine compartment

It is placed in the engine compartment near the battery (left-hand side).

Fuse box diagrams

2007**Dashboard Fuse box****Assignment of the fuses in the Dashboard Fuse box (2007)**

N°	Rating	Functions
F1	15 A	Rear wiper.
F2	-	Not used.
F3	5 A	Air bags and pretensioners control unit.

N°	Rating	Functions
F4	10 A	Clutch pedal and dual-function brake switches, electrochromatic interior mirror, air conditioning, steering wheel angle sensor, automatic gearbox, switching and protection unit.
F5	30 A	Front one-touch electric windows, folding mirrors supply, glass panoramic roof shutter.
F6	30 A	Rear one-touch electric windows.
F7	5 A	Front and rear courtesy lights, map reading lights, rear reading lights, sun visor lighting, glove box lighting.
F8	20 A	Audio equipment, audio/telephone, CD changer, multifunction display, tyre under-inflation detection.
F9	30 A	Front 12 V socket, lighter.
F10	15 A	Steering wheel controls, alarm siren, alarm control unit.
F11	15 A	Low current ignition switch.
F12	15 A	Instrument panel, seat belt and passenger's front air bag warning lights display, air conditioning, drivers seat memory unit, driving school module.
F13	5 A	Engine fuse box, air bags, piloted manual gearbox gear lever.
F14	15 A	Multifunction display, amplifier, hands-free kit, rain/ brightness sensor, parking assistance control unit, trailer fuse box, lane departure warning system.
F15	30 A	Locking and deadlocking.
F17	40 A	Rear screen and exterior mirrors de-icing.
SH	-	PARC shunt.
G36	-	Not used.
G37	5 A	Trailer fuse box.

N°	Rating	Functions
G38	30 A	Driver's seat memory unit.
G39	30 A	Trailer fuse box supply.
G40	30 A	Hi-Fi amplifier.

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2007)

N°	Rating	Functions
F1	20 A	Engine control unit supply, injection pump and EGR solenoid valves (2 l HDI 16V), injectors (2 l HDI 16V).
F2	15 A	Horn.
F3	10 A	Front/rear wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Fuel pump (petrol), purge canister, turbine discharge and Turbo pressure regulation solenoid valves (1.6 l THP 16V), oil vapour heater (1.6 l THP

N°	Rating	Functions
		16V), diesel heater (1.6 l HDI 16V).
F6	10 A	Vehicle speed sensor, ABS/ESP control unit.
F7	10 A	Power steering control unit, automatic gearbox, engine coolant level detector.
F8	25 A	Starter control.
F9	10 A	Diagnostic socket, directional headlamps, air flow sensor (Diesel), particle emission filter pump (Diesel).
F10	30 A	Engine control unit actuators (petrol: ignition coils, solenoid valves, oxygen sensors, injectors, heaters, fuel pump, controlled thermostat) (Diesel: solenoid valves, heaters).
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers slow/fast speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	30 A	Air pump.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (1.4 l 16V and 1.6 l VTi 16V), purge canister solenoid valve (1.4 l 16V and 1.6 l VTi 16V), oxygen sensors (petrol), air cooling solenoid valves (Diesel).
F20	10 A	Controlled thermostat, variable timing solenoid valves, Turbo pressure regulation solenoid valve (Diesel), engine coolant level detector (Diesel).
F21	5 A	Fan assembly relay supply, Valvetronic relay control (1.4 l 16V and 1.6 l VTi 16V), Turbo cooling (1.6 l THP 16V), airflow sensor (1.6 l HDI 16V).

Fuses on the battery

Assignment of the fuses on the battery (2007)

Fuse N°	Rating	Functions
F1	15 A	Gearbox (piloted manual or automatic).
F2	15 A	Diagnostic socket, daytime lights.
F3	5 A	Dual-function brake switch.
F4	-	Not used.
F5*	80 A	Power steering electropump assembly.
F6*	70 A	Heating unit (Diesel).
F7*	100 A	Switching and protection unit.
F8	-	Not used.
F9*	30 A	Piloted manual gearbox electropump assembly.
F10*	30 A	Valvetronic electric motor (1.6 I THP 16V).

Fuse N°	Rating	Functions
MF1*	50 A	Fan assembly.
MF2*	50 A	Passenger compartment fuse box.
MF3*	80 A	Built-in systems interface.
MF4*	-	Not used.
MF5*	50 A	ABS/ESP control unit.
MF6*	30 A	ABS/ESP control unit.
MF7*	80 A	Built-in systems interface.
MF8*	-	Not used.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.</i>

2008

Dashboard Fuse box

Advertisements

Assignment of the fuses in the Dashboard Fuse box (2008)

N°	Rating	Functions
F1	-	Not used.
F2	-	Not used.
F3	5 A	Air bags and pretensioners control unit.
F4	10 A	Clutch pedal and dual-function brake switches, electrochromatic interior mirror, air conditioning, steering wheel angle sensor, automatic gearbox, switching and protection unit.
F5	30 A	Front one-touch electric windows, folding mirrors supply.
F6	30 A	Rear one-touch electric windows, exterior door opening controls.

N°	Rating	Functions
F7	5 A	Front and rear courtesy lights, map reading lights, sun visor lighting, glove box lighting.
F8	20 A	Audio equipment, audio/telephone, CD changer, multifunction display, tyre under-infl ation detection, interior storage compartments.
F9	30 A	Front 12 V socket, lighter.
F10	15 A	Steering wheel controls, alarm siren, alarm control unit.
F11	15 A	Low current ignition switch.
F12	15 A	Instrument panel, seat belt and passenger's front air bag warning lights display, air conditioning, driver's seat memory unit, retractable roof unit.
F13	5 A	Engine fuse box, air bags.
F14	15 A	Multifunction display, amplifi er, hands-free kit, rain/ brightness sensor, parking assistance control unit, passenger's seat memory unit.
F15	30 A	Locking and deadlocking.
F17	40 A	Rear screen and exterior mirrors de-icing.
SH	-	PARC shunt.
G36	30 A	Driver and passenger heated seats.
G37	5 A	Trailer fuse box.
G38	30 A	Driver's seat memory unit.
G39	-	Not used.
G40	30 A	Hi-Fi amplifier, passenger's seat memory unit.

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2008)

N°	Rating	Functions
F1	20 A	Engine control unit supply, injection pump and EGR solenoid valves (2 l HDI 16V), injectors (2 l HDI 16V)
F2	15 A	Horn.
F3	10 A	Front wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Purge canister, turbine discharge and Turbo pressure regulation solenoid valves (1.6 l THP 16V), oil vapour heater (1.6 l THP 16V).
F6	10 A	Vehicle speed sensor, ABS/ESP control unit.
F7	10 A	Power steering control unit, automatic gearbox, engine coolant level detector.
F8	25 A	Starter control.
F9	10 A	Diagnostic socket, directional headlamps, air flow sensor (Diesel), particle emission filter pump (Diesel), exterior mirror controls.
F10	30 A	Engine control unit actuators (petrol: ignition coils, solenoid valves, oxygen sensors, injectors, heaters, fuel pump, controlled thermostat) (Diesel: solenoid valves, heaters).

N°	Rating	Functions
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers slow/fast speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	-	Not used.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oxygen sensors (petrol), air cooling solenoid valves (Diesel).
F20	10 A	Controlled thermostat, variable timing solenoid valves, Turbo pressure regulation solenoid valve (Diesel), engine coolant level detector (Diesel).
F21	5 A	Fan assembly relay supply, Turbo cooling (1.6 l THP 16V).

Fuses on the battery

Assignment of the fuses on the battery (2008)

N°	Rating	Functions
F1	15 A	Automatic gearbox.
F2	15 A	Diagnostic socket, daytime lights.
F3	5 A	Dual-function brake switch.
F4	-	Not used.
F5*	80 A	Power steering electropump assembly.
F6*	70 A	Heating unit (Diesel).
F7*	100 A	Switching and protection unit.
F8*	50A	Driver and passenger neck heater.
F9	-	Not used.
F10*	30 A	Valvetronic electric motor (1.6 I THP 16V).
MF1*	50 A	Retractable roof electropump assembly and unit.
MF2*	50 A	Passenger compartment fuse box.
MF3*	50 A	Fan assembly.
MF4*	80A	Built-in systems interface.
MF5*	80 A	Built-in systems interface.
MF6*	40 A	ABS/ESP control unit.
MF7*	30 A	ABS/ESP solenoid valves.
MF8*	-	Not used.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.</i>

2009**Dashboard Fuse box**

Advertisements

Assignment of the fuses in the Dashboard Fuse box (2009)

N°	Rating	Functions
F1		Not used.

N°	Rating	Functions
F2		Not used.
F3	5 A	Air bags and pretensioners control unit.
F4	10 A	Clutch pedal and dual-function brake switches, electrochromatic interior mirror, air conditioning, steering wheel angle sensor, automatic gearbox, switching and protection unit.
F5	30 A	Front one-touch electric windows, folding mirrors supply.
F6	30 A	Rear one-touch electric windows, exterior door opening controls.
F7	5 A	Front and rear courtesy lights, map reading lights, sun visor lighting, glove box lighting.
F8	20 A	Audio equipment, audio/telephone, multifunction display, tyre under-inflation detection, interior storage compartments.
F9	30 A	Front 12 V socket, lighter.
F10	15 A	Steering wheel controls, alarm siren, alarm control unit.
F11	15 A	Low current ignition switch.
F12	15 A	Instrument panel, seat belt and passenger's front air bag warning lights display, air conditioning, driver's seat memory unit, retractable roof unit.
F13	5 A	Engine fuse box, air bags.
F14	15 A	Multifunction display, amplifier, hands-free kit, rain/ brightness sensor, parking assistance control unit, passenger's seat memory unit.
F15	30 A	Locking and deadlocking.
F17	40 A	Rear screen and exterior mirrors de-icing.
SH	-	PARC shunt.
G36	30 A	Driver and passenger heated seats.
G37	5 A	Trailer fuse box.

N°	Rating	Functions
G38	30 A	Driver's seat memory unit.
G39	-	Not used.
G40	30 A	Hi-Fi amplifier, passenger's seat memory unit.

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2009)

N°	Rating	Functions
F1	20 A	Engine control unit supply, injection pump and EGR solenoid valves (2 l HDI 16V), injectors (2 l HDI 16V).
F2	15 A	Horn.
F3	10 A	Front wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Purge canister, turbine discharge and Turbo pressure regulation solenoid valves (1.6l THP 16V), oil vapour heater (1.6 l THP 16V), diesel heater (1.6

N°	Rating	Functions
		I HDI 16V).
F6	10 A	Vehicle speed sensor, ABS/ESP control unit.
F7	10 A	Power steering control unit, automatic gearbox, engine coolant level detector.
F8	25 A	Starter control.
F9	10 A	Diagnostic socket, directional headlamps, air flow sensor (Diesel), particle emission filter pump (Diesel), exterior mirror controls.
F10	30 A	Engine control unit actuators (petrol: ignition coils, solenoid valves, oxygen sensors, injectors, heaters, fuel pump, controlled thermostat) (Diesel: solenoid valves, heaters).
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers slow/fast speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	-	Not used.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (1.6 I VTi 16V), purge canister solenoid valve (1.6 I VTi 16V), oxygen sensors (petrol), air cooling solenoid valves (Diesel).
F20	10 A	Controlled thermostat, variable timing solenoid valves, Turbo pressure regulation solenoid valve (Diesel), engine coolant level detector (Diesel).
F21	5 A	Fan assembly relay supply, Valvetronic relay control (1.6 I VTi 16V), Turbo cooling (1.6 I THP 16V), air flow sensor (1.6 I HDI 16V).

Fuses on the battery

Assignment of the fuses on the battery (2009)

N°	Rating	Functions
F1	15 A	Automatic gearbox.
F2	15 A	Diagnostic socket, daytime lights.
F3	February 12, 1900	Dual-function brake switch.
F4	-	Not used.
F5*	80 A	Power steering electropump assembly.
F6*	70 A	Heating unit (Diesel).
F7*	100 A	Switching and protection unit.
F8*	50 A	Driver and passenger "AIRWAVE" systems.
F9	-	Not used.
F10*	30 A	Valvetronic electric motor (1.6 I THP 16V).
MF1*	50 A	Retractable roof electropump assembly and unit.

N°	Rating	Functions
MF2*	50 A	Passenger compartment fuse box.
MF3*	50 A	Fan assembly.
MF4*	80 A	Built-in systems interface.
MF5*	80 A	Built-in systems interface.
MF6*	40 A	ABS/ESP control unit.
MF7*	30 A	ABS/ESP solenoid valves.
MF8*	-	Not used.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.</i>

2010

Advertisements

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2010)

N°	Rating	Functions
F1	-	Not used.
F2	30 A	Locking and deadlocking earth.
F3	5 A	Airbags and pretensioners control unit.
F4	10 A	Clutch pedal and dual-function brake switches, electrochromatic rear view mirror, air conditioning, steering wheel angle sensor, automatic gearbox, switching and protection unit.
F5	30 A	Front one-touch electric windows, folding mirrors supply.
F6	30 A	Rear one-touch electric windows, exterior door opening controls.
F7	5 A	Front and rear courtesy lamps, map reading lamps, sun visor lighting, glove box lighting.
F8	20 A	Audio equipment, audio/telephone, multifunction screen, tyre under-inflation detection, interior storage compartments.
F9	30 A	Front 12V socket, cigar lighter.
F10	15 A	Steering mounted controls, alarm siren, alarm control unit.
F11	15 A	Low current ignition switch.

N°	Rating	Functions
F12	15 A	Instrument panel, seat belt and passenger's front airbag warning lamps display, air conditioning, driver's seat memory unit, retractable roof unit.
F13	5 A	Engine fusebox, airbags.
F14	15 A	Multifunction screen, amplifier, hands-free kit, rain/sunshine sensor, parking sensors control unit, passenger's seat memory unit.
F15	30 A	Locking and deadlocking.
F17	40 A	Rear screen and door mirrors demist/defrost.
SH	-	PARC shunt.
G36	30 A	Driver and passenger heated seats.
G37	5 A	Trailer fusebox.
G38	30 A	Driver's seat memory unit.
G39	-	Not used.
G40	30 A	Hi-Fi amplifier, passenger's seat memory unit.

Engine compartment

Assignment of the fuses in the engine compartment (2010)

N°	Rating	Functions
F1	20 A	Engine control unit supply, injection pump and EGR electrovalves (2 litre HDI), injectors (2 litre HDI).
F2	15 A	Horn.
F3	10 A	Front wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Purge canister, turbine discharge and Turbo pressure regulation electrovalves (1.6 l THP 16V), oil vapour heater (1.6 litre THP 16V), Diesel heater (1.6 litre HDI).
F6	10 A	Vehicle speed sensor, ABS/ESP control unit.
F7	10 A	Power steering control unit, automatic gearbox, engine coolant level detector.
F8	25 A	Starter motor control.
F9	10 A	Diagnostic socket, directional headlamps, air flow sensor (Diesel), particle emission filter pump (Diesel), door mirror controls.
F10	30 A	Engine control unit actuators (petrol: ignition coils, electrovalves, oxygen sensors, injectors, heaters, fuel pump, electronic thermostat) (Diesel: electrovalves, heaters).
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers slow/fast speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	-	Not used.
F15	10 A	Right-hand main beam headlamp.

N°	Rating	Functions
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (1.6 litre VTi 16V), purge canister electrovalve (1.6 litre VTi 16V), oxygen sensors (petrol), air cooling electrovalves (Diesel).
F20	10 A	Electronic thermostat, variable timing electrovalves, Turbo pressure regulation electrovalve (Diesel), engine coolant level detector (Diesel).
F21	5 A	Fan assembly relay supply, Valvetronic relay control (1.6 litre VTi 16v), Turbo cooling (1.6 litre THP 16V), air flow sensor (1.6 litre HDI).

Fuses on the battery

Assignment of the fuses on the battery (2010)

N°	Rating	Functions
F1	-	Not used.

N°	Rating	Functions
F2	5 A	Dual-function brake switch.
F3	5 A	Battery charge unit.
F4	25 A	ABS/ESP electrovalves.
F5	-	Not used.
F6	15 A	Automatic gearbox.
F7*	80 A	Power steering electropump assembly.
F8*	60 A	Fan assembly.
F9*	70 A/30 A	Pre-heat unit (DieselValvetronic electric motor (1.6 litre THP 16V).
F10*	40 A	ABS/ESP electropump assembly.
F11*	100 A	Switching and protection unit.
F12*	-	Not used.
MF1*	-	Not used.
MF2*	30 A	Trailer fusebox.
MF3*	50 A	Passenger compartment fusebox.
MF4*	80 A	Built-in systems interface.
MF5*	80 A	Built-in systems interface.
MF6*	-	Not used.
MF7*	30 A	Heated seats.
MF8*	20 A	Headlamp wash.
		<i>* The midi-fuses and maxi-fuses provide additional protection for the electrical systems. All work on these types of fuse must be carried out by a PEUGEOT dealer.</i>

2011

Dashboard Fuse box

Advertisements

Assignment of the fuses in the Dashboard Fuse box (2011)

N°	Rating	Functions
F1	-	Not used.
F2	30 A	Locking and deadlocking earth.

N°	Rating	Functions
F3	5 A	Airbags and pretensioners control unit.
F4	10 A	Clutch pedal and dual-function brake switches, electrochromatic rear view mirror, air conditioning, steering wheel angle sensor, automatic gearbox, switching and protection unit.
F5	30 A	Front one-touch electric windows, folding mirrors supply.
F6	30 A	Rear one-touch electric windows, exterior door opening controls.
F7	5 A	Front and rear courtesy lamps, map reading lamps, sun visor lighting, glove box lighting.
F8	20 A	Audio equipment, audio/telephone, multifunction screen, tyre under-inflation detection, interior storage compartments.
F9	30 A	Front 12V socket, cigar lighter.
F10	15 A	Steering mounted controls, alarm siren, alarm control unit.
F11	15 A	Low current ignition switch.
F12	15 A	Instrument panel, seat belt and passenger's front airbag warning lamps display, air conditioning, driver's seat memory unit, retractable roof unit.
F13	5 A	Engine fusebox, airbags.
F14	15 A	Multifunction screen, amplifier, hands-free kit, rain/sunshine sensor, parking sensors control unit, passenger's seat memory unit.
F15	30 A	Locking and deadlocking.
F17	40 A	Rear screen and door mirrors demist/defrost.
SH	-	PARC shunt.
G36	30 A	Driver and passenger heated seats.
G37	5 A	Trailer fusebox.
G38	30 A	Driver's seat memory unit.

N°	Rating	Functions
G39	-	Not used.
G40	30 A	Hi-Fi amplifier, passenger's seat memory unit.

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2011)

N°	Rating	Functions
F1	20 A	Engine control unit supply, injection pump and EGR electrovalves (2 litre HDI), injectors (2 litre HDI).
F2	15 A	Horn.
F3	10 A	Front wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Purge canister, turbine discharge and Turbo pressure regulation electrovalves (1.6 l THP 16V), oil vapour heater (1.6 litre THP 16V), Diesel heater (1.6 litre HDI).

N°	Rating	Functions
F6	10 A	Vehicle speed sensor, ABS/ESP control unit.
F7	10 A	Power steering control unit, automatic gearbox, engine coolant level detector.
F8	25 A	Starter motor control.
F9	10 A	Diagnostic socket, directional headlamps, air flow sensor (Diesel), particle emission filter pump (Diesel), door mirror controls.
F10	30 A	Engine control unit actuators (petrol: ignition coils, electrovalves, oxygen sensors, injectors, heaters, fuel pump, electronic thermostat) (Diesel: electrovalves, heaters).
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers slow/fast speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	-	Not used.
F15	10 A	Right-hand main beam headlamp.
F16	10 A	Left-hand main beam headlamp.
F17	15 A	Left-hand dipped headlamp.
F18	15 A	Right-hand dipped headlamp.
F19	15 A	Oil vapour heater (1.6 litre VTi 16V), purge canister electrovalve (1.6 litre VTi 16V), oxygen sensors (petrol), air cooling electrovalves (Diesel).
F20	10 A	Electronic thermostat, variable timing electrovalves, Turbo pressure regulation electrovalve (Diesel), engine coolant level detector (Diesel).
F21	5 A	Fan assembly relay supply, Valvetronic relay control (1.6 litre VTi 16v), Turbo cooling (1.6 litre THP 16V), air flow sensor (1.6 litre HDI).

Fuses on the battery

Assignment of the fuses on the battery (2011)

N°	Rating	Functions
F1	-	Not used.
F2	5 A	Dual function brake switch.
F3	5 A	Battery charge unit.
F4	25 A	ABS/ESP solenoid valves.
F5	-	Not used.
F6	15 A	Automatic gearbox.

Learn more: