


Haval H2 Fuse Box Diagram

Ads

Date: 20.10.2019 (US:10.20.19), Category: Haval


Passenger Compartment Fuse Panel

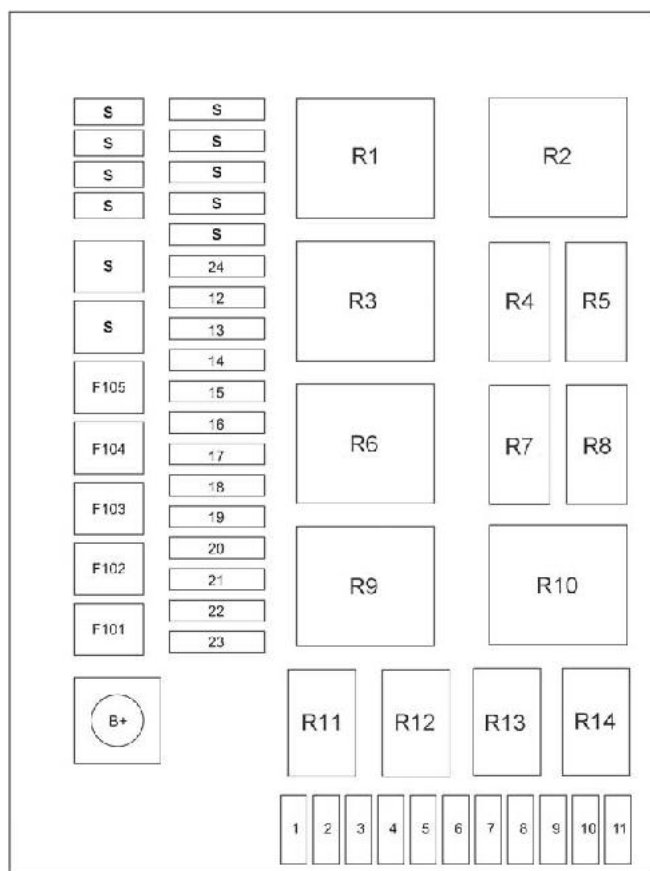

No.	A	Fused component
1	10	A/C
2	10	Rear wiper
3	25	Defrosting
4	20	Front wiper
5	10	Back-up lamps
6	20	Window Lift
7	10	ACC
8	25	Cigar Lighter , standby power supply
9	10	Combination instrument
10	15	Engine Control Module
11	15	Air bag
12	30	Electric seat
13	10	Interior Lighting
14	15	PEPS
15	20	MP5/CD
16	20	Body Control Module (BCM)
17	20	Body Control Module (BCM)
18	20	Body Control Module (BCM)
19	20	Body Control Module (BCM)

20	20	Body Control Module (BCM)
21	20	Body Control Module (BCM)
22	20	Body Control Module (BCM)
23	10	Always energized
24	25	Moon roof
101	40	Blower Motor
102	30	Window Lift
103	30	IG2 Relay
104	40	IG1 Relay and ACC
105	40	Defrosting relay
S	-	Spare
Relay		
R1	Not used	
R2	Blower Motor	
R3	Not used	
R4	ACC	
R5	IG1	
R6	Not used	
R7	Defrosting	
R8	Window Lift	
R9	Not used	
R10	Air blower high speed relay	
R11	Front wiper	
R12	Front wiper high speed relay	
R13	Rear wiper	
R14	IG2	


Fuse Box In The Engine Compartment

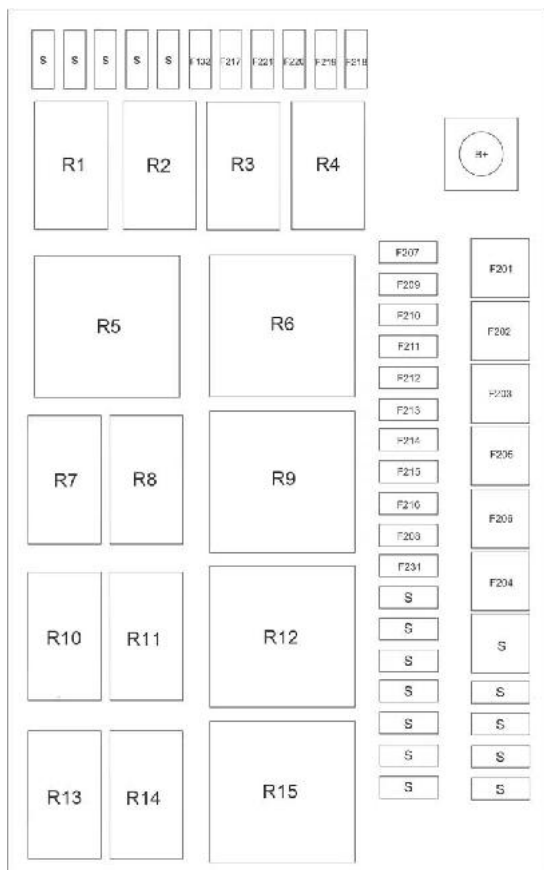

No.	A	Fused component
132	20	Transmission Control Module
201	30	Cooling fan low speed
202	40	Cooling fan high speed
203	40	ABS
204	40	ESP
205	40	High Beam relay, Low Beam relay
206	40	Starter relay
207	10	Engine Control Module
208	20	Headlamp Washer
209	20	A/C compressor
210	10	4WD
211	10	Horn
212	15	Fuel pump
213	25	ABS
214	10	Stop Lamp
215	20	Electric vacuum pump
216	20	Main relay
217	15	Ignition
218	10	Low beam headlamps (right)
219	10	Low beam headlamps (left)
220	15	High Beam
221	10	Heated Oxygen Sensor
232	20	Transmission Control Module
S	-	Spare
Relay		
R1		Electric vacuum pump

R2	Low Beam
R3	High Beam
R4	Horn
R5	Main relay
R6	Driver circuit relay
R7	Fuel pump
R8	A/C compressor
R9	Cooling fan high speed
R10	Solenoid shift valve
R11	Headlamp Washer
R12	Starter
R13	Not used
R14	Not used
R15	Cooling fan low speed

Fuse Block on Positive Battery Terminal

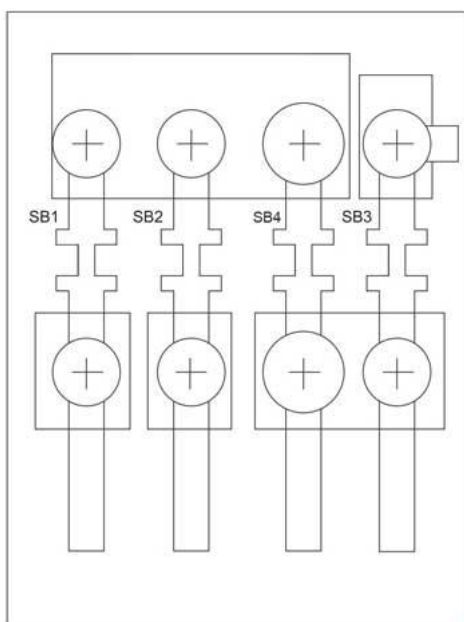

No.	A	Fused component
SB1	80	Passenger Compartment Fuse Panel
SB2	100	Engine Compartment Fuse Box
SB3	80	Alternator
SB4	150	Fuses SB1, SB2, SB3



Print



Fuse Panel Layout Haval H2 - 1.5 L 4G15 (2014, 2015, 2016, 2017, 2018)